

# Quick Release Conversion Kit

## Part No. 204-1040



Apply the Teflon Tape to the threads as shown in pictures below.

1



Apply some Teflon Tape to the threads on the unloader valve outlet.

2



Fit the QR coupler to the unloader valve outlet

3



Fit the QR adaptor to the high pressure hose then connect it to the QR coupler.

4



Fit the second QR adaptor to the other end of the high pressure hose.

5



Apply some Teflon Tape to the threads on the trigger gun inlet.

6



Fit the second QR coupler to the trigger gun inlet and connect the other end of the hose to it.

# Quick Release Conversion Kit

## Part No. 204-1040



Apply the Teflon Tape to the threads as shown in pictures below.

1



Apply some Teflon Tape to the threads on the unloader valve outlet.

2




Fit the QR coupler to the unloader valve outlet

3



Fit the QR adaptor to the high pressure hose then connect it to the QR coupler.

4

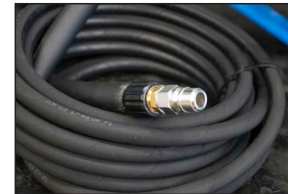

Fit the second QR adaptor to the other end of the high pressure hose.

5



Apply some Teflon Tape to the threads on the trigger gun inlet.

6



Fit the second QR coupler to the trigger gun inlet and connect the other end of the hose to it.